



## Quick Start Quartus FPGA Configuration




### FPGA Configuration :

Connect the DE10 board to the PC, with a USB cable.


Leds on DE10 board should turn on.

Check your “Device manager” on Win10 : nothing should appear with a warning sign(exclamation point in a yellow triangle).

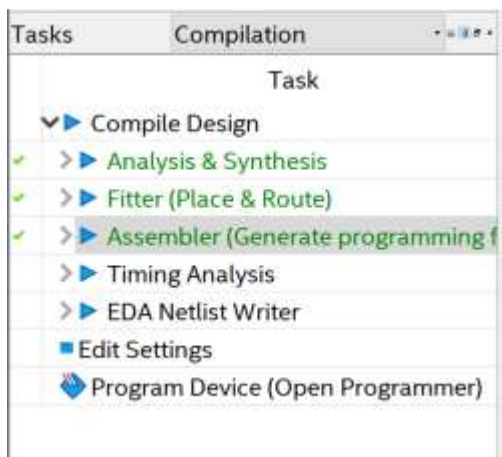

Double click on “Program Device”

The FPGA programmer will open in a new window.

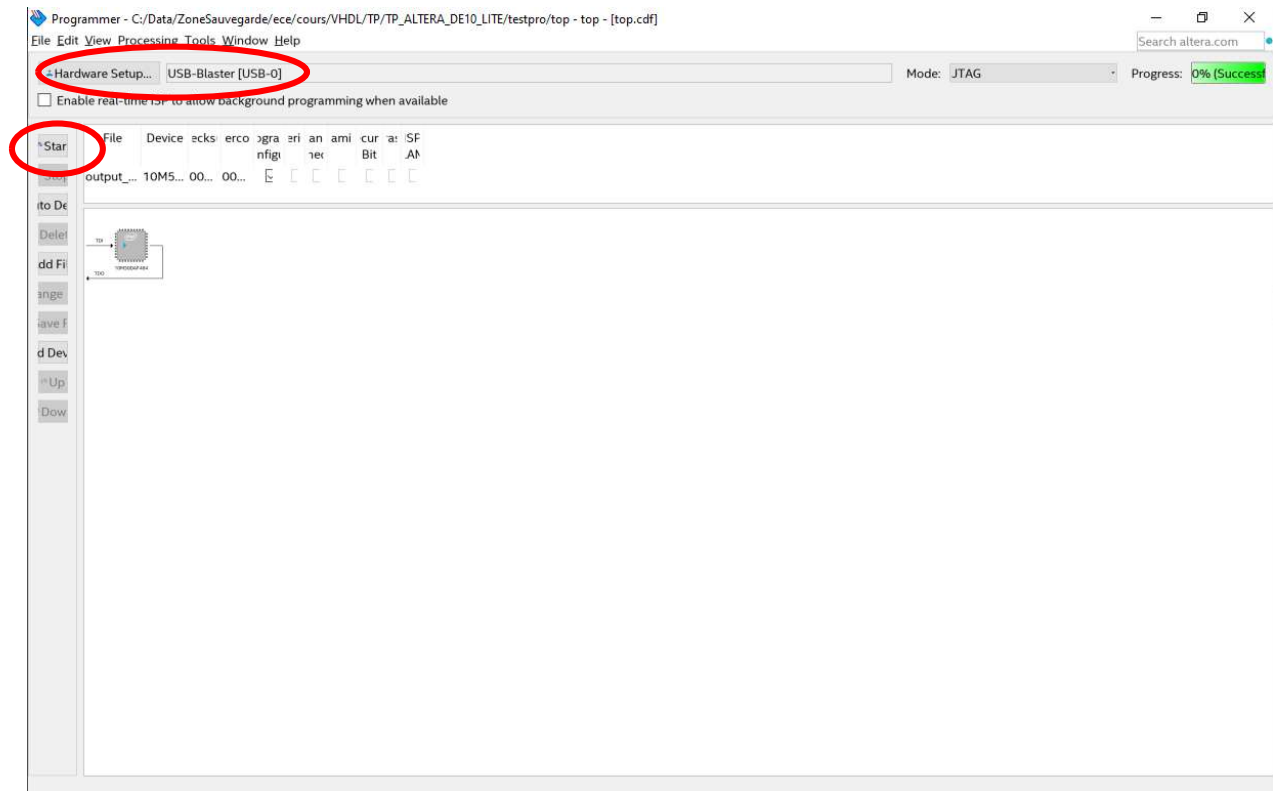

Check if your connected with “USB-Blaster”

Click on “Start”.

Wait the end of upload.

Play with DE10 Switch 2 and verify if LEDR9 turn ON/OFF.